

Model 7000 Master Programming Mode



With the Time of Day Display set to 12:01 P.M., push and hold the Set Up and Set Down buttons for 5 seconds.

Note:

1. Set Time of Day Display to 12:01 P.M.
2. Push and hold the Set Up and Set Down buttons for 5 seconds.
3. Press the Extra Cycle Button once per display until all displays are viewed and normal operation is resumed.
4. Option setting display may be changed as required by pushing either the Set Up or Set Down button.
5. Depending on current valve programming, certain displays may not be viewed or set.

US/Metric Display Format

Example: Gallons [U--1] = Default
Metric [U--2]

Regenerant Flow

Example: Downflow [dF] = Default
Downflow Fill First [dFFF]
Filter [Fltr]

Regeneration Type

Example: Time Clock Delayed [7--1]
Meter Immediate [7--2]
Meter Delayed [7--3] = Default
Meter Delayed - Variable Brining [7--4]
Days of the Week [7--5]
*(Skip to Regeneration Time if [7--5])

System Capacity

Example: 24 Kilogram Capacity, Gallon Format [C-24] = Default
180 Degree-Liters, Metric Format [C180]
*Not Applicable to [7--5]

Feed Water Hardness

Example: 15 Grains/Gallon [H-15] = Default
25 Degrees, Metric [H-25]
*Not Applicable to [7--5]

Regeneration Time

Example: 2 O'Clock A.M. [2:00] = Default

Model 7000 *Master Programming Mode*



Regeneration Day Override OR Day of the Week

Example: Regenerate every 7 days
Cancel Setting

[A- -7]
[AOFF] = Default

[Day X] (where X = 1 through 7) Set to Current Day

Note: OFF not available

*Day is incremented at midnight.

Regeneration Cycle Step Programming (1-5)

Example: 10 minute Backwash, in US Format, Downflow [1- 10]
60 minute Brine Draw/Slow Rinse, in US Format [2- 60]

5 minute 2nd Backwash in US Format [3- - 5]

10 minute Rapid Rinse in US Format [4- 10]

12 minute Brine Refill US format [5- 12]

Note: All Above Settings Are Shown in Factory Default Settings Based on Downflow Regeneration Type and US-1 Display Format.

Push Extra Cycle button to advance through all [D1--X] settings

Note: Regeneration will occur on the day or days which are set to 1 (enabled) at the regeneration time which was set in the previous program step.

Individual Day of the Week Settings:

[d1--x] where x = 1: d1 enabled regeneration this day
where x = 0: d1 disabled regeneration this day

[d7--1] = Default

***Skip to Line Frequency Setting if [7--1] or [7--5].**

Flow Meter Size

Example: 1-1/4" Turbine Meter, US
1-1/4" Turbine Meter, metric

[F-82] = Default
[F21.6]

***Not applicable to [7--1] or [7--5]**


Safety Factor

Example: 25% Safety Factor
0% = No Safety Factor

[cF25]
[cF-O] = Default

***Not Applicable to [7--1] or [7--5].**

Model 7000 *Master Programming Mode*

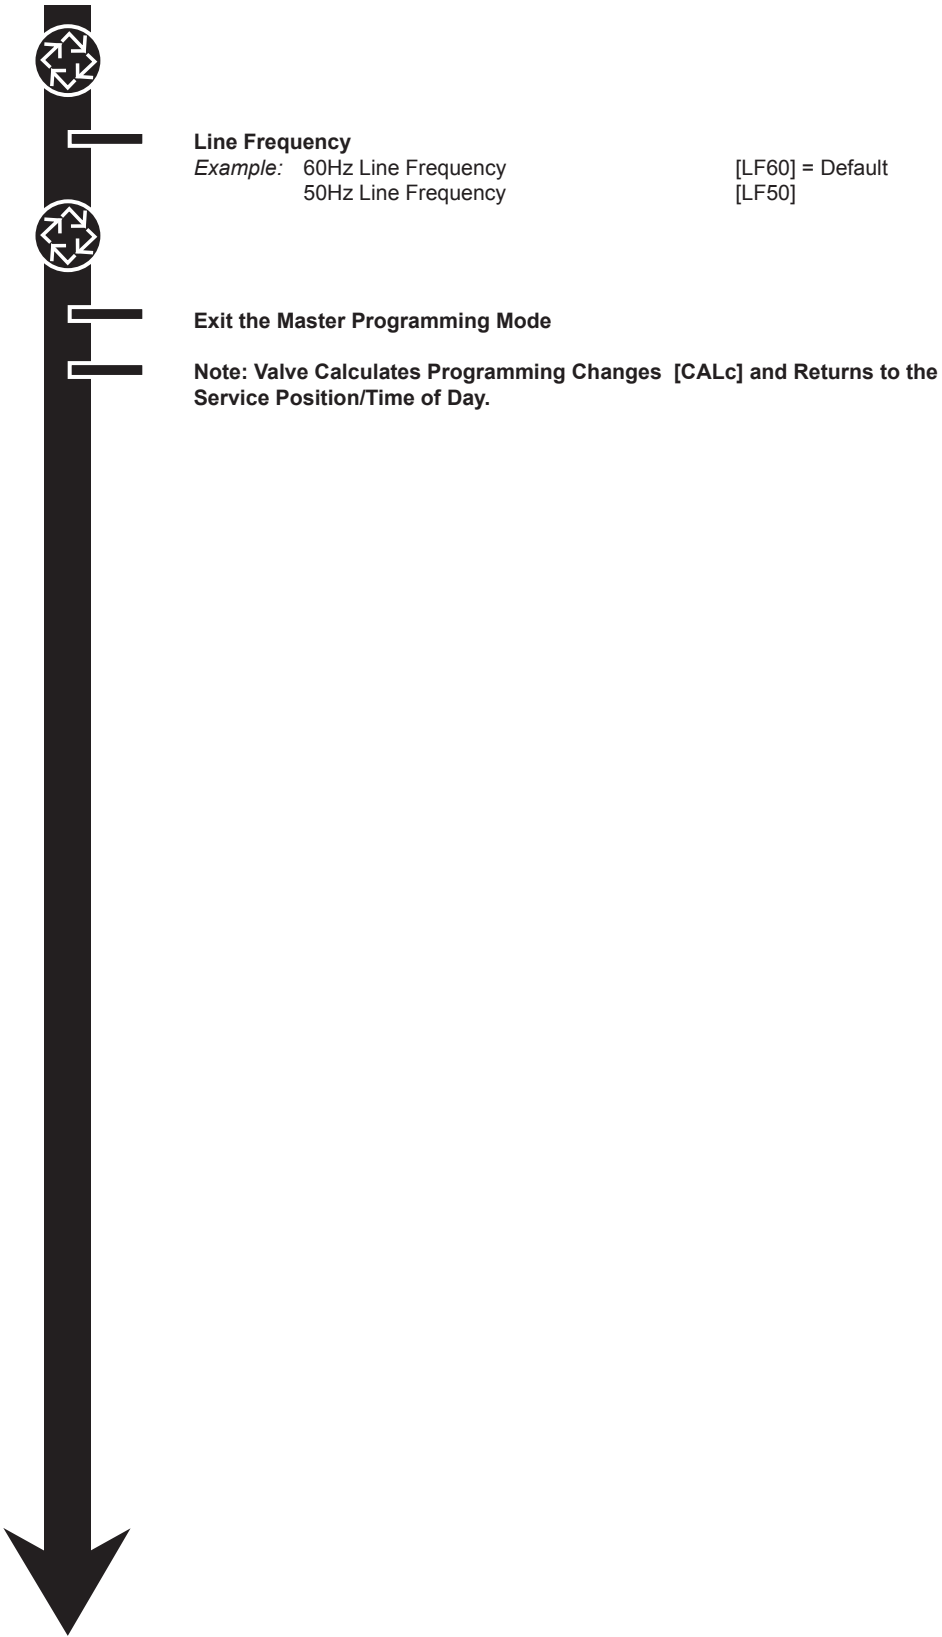

Model 7000 *Master Programming Mode*

Example: Feed water hardness = 20 grains/gallon Setting: [H 20]

Default = 15 grains/gallon [H -15]

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

6. Regeneration Time (No display Code)

Note: This program step is not available for Regeneration Type Meter Immediate [7 - - 2].

Use this program step to set the Time of Day a Regeneration occurs. A non-flashing colon between the hour and minute digits identifies the Regeneration Time display.

Range = 12:00 – 11:59 P.M., US

Range = 00:00 – 23:59, metric

Example: 2 o'clock A.M. regeneration time Setting: [2:00]

Default = 2:00 A.M.

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

Note: When the piston type is Fltr, Regeneration time defaults to:

- 12:00 A.M., US
- 00:00, Metric

7. Regeneration Day Override (Display code A): [7 - - 1], [7 - - 2], [7 - - 3], [7 - - 4] ONLY

Use this program step, identified by the letter A in the first digit, to set the maximum number of days the unit can be In Service without a regeneration.

- For **Regeneration Type Time Clock Delayed** [7 - - 1], the system regenerates at the time set in program step #5 after the number of days programmed in this step.
- For any Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4], the system regenerates after the number of days programmed in this step at the Regeneration Time setting, step #6.

Range = 0 – 99, Time Clock Delayed [7 - - 1]

Range = 1 – 199, Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4]

Default = 7 days, Time Clock Delayed [7 - - 1]

Default = Meter Regeneration Types [7 - - 2], [7 - - 3], [7 - - 4]

Example:

Override every 7 days Setting: [A -- 7]

Option turned off Setting: [A OFF]

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

8. Day of the Week: [7 - - 5] ONLY (Display Code “day x”) where x is one (1) to seven (7)

Use this program step, identified by the word Day, to set the current day of the week. The user can select any number in the range of 1 through 7 to represent the current day of the week. The current day number will increment each day at midnight.

Default = Day 7, Day of the Week [7 - - 5]

Example:

Monday = Day 1; Tuesday = Day 2; Wednesday = Day 3; Thursday = Day 4; Friday = Day 5; Saturday = Day 6; and Sunday = Day 7

Model 7000 Master Programming Mode

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

9. Regeneration Cycle Step Programming (Display Code 1 – 6)

Use this program step to program the Regeneration Cycle step times.

- The number of Regeneration Cycle steps available is determined by the Piston/Cam type selection entered in step #1.
- The Regeneration Cycle step being programmed is shown in the first digit of the display. Each display is used to set the duration time in minutes of that specific step in the Regeneration Cycle.

Range = 0 – 199 minutes, US [u - -1]

Range = 0 – 199 minutes, metric [u - - 2]

Default Times for all of the Available Piston/Cam Types

Regeneration Cycle Step Times, in minutes, depend on the Piston / Cam selected.

Cycle Step	dF	dFFF	FLtr
1	10 = Backwash	12 = Fill	10 = Backwash
2	60 = Brine Draw	60 = Brine Making	10 = Rapid Rinse
3	5 = 2nd Backwash	10 = Backwash	
4	10 = Rapid Rinse	60 = Brine Draw	
5	12 = Refill	5 = 2nd Backwash	
6		10 = Rapid Rinse	

Note: Cycle step #1 minimal setting is 1 minute.

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

10. Regeneration Day Setting

[d1 - -x]

[d2 - -x]

[d3 - -x]

[d4 - -x]

[d5 - -x]

[d6 - -x]

[d7 - -x]

Where x can be set to 1 or 0. Regenerations will occur at the programmed regeneration time on the day(s) which are set to 1. Regenerations will not occur on days which are set to 0. If all days are set to 0, a regeneration will never occur and the control will display [Err2] on the 8th day. To clear this error, the user must program at least one day of the week for regeneration or manually initiate a regeneration.

11. Flow Meter Size (Display Code F)

Note: This program step is not available for **Regeneration Type Time Clock Delayed [7 - - 1]**.

Use this program step, identified by the letter F in the first digit, to set the flow meter size. This program step sets the proper number of pulses generated by the flow meter for each gallon or liter of water flow.

Range = 0 – 999 pulses per gallon, US [u - -1]

Range = 0 – 99.9 pulses per liter, metric [u - - 2]

Default = 82 pulses per gallon, US [u - - 1]

Default = 21.6 pulses per liter, metric [u - - 2]

Model 7000 *Master Programming Mode*

Example:

1-1/4" Turbine Meter, US [u - -1] Setting: [F 82]
1-1/4" Turbine Meter, metric [u - - 2] Setting: [F 21.6]

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

12. Safety Factor (Display Code cF)

Use this program step to provide a safety margin by lowering the available capacity. The setting is in percentage and ranges from 0 – 50%.

Example:

[cF 0] 0% = No safety factor
[cF 35] 35% = The available capacity is lowered by 35%

Default: [cF 0] 0% = No safety factor

Note: This program step is not available in the Time Clock mode [7 - - 1] or the Day of the Week Mode [7 - - 5].

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

13. Line Frequency (LF)

Use this program step, identified by the letters LF in the first digit of the display, to set the frequency of the power supply. When the line frequency is set properly, all timekeeping functions remain accurate.

There are two possible settings:

60Hz Line Frequency Setting: [L F 60]
50Hz Line Frequency Setting: [L F 50]

Default = 60 Cycles (program step #2 = u1)

Default = 50 Cycles (program step #2 = u2)

- Use the Set Up and Set Down buttons to adjust this value.
- Press the Extra Cycle button to proceed to the next step.

Exiting the Master Programming Mode

- Press the Extra Cycle button once more to exit the Master Program Mode and resume normal operation.
- Finish the control programming by completing the Control Start-up procedures in the service manual.

Note: If any changes are made to the Piston/Cam setting during the Master Programming Mode, the valve auto-homes when exiting the Master Programming Mode.

If any changes were made to capacity, hardware or safety factor settings, the control recalculates the System Capacity and sets the Starting Reserve to one-third of the new value.

Model 7000 Master Programming Mode

Error Codes

Note: Error codes appear on the In Service display.

Error Code	Probable Cause	Recover and Resetting
[Err 0]	Drive motor is stalled	Unplug the unit from the power source
[Err 1]	Drive motor is running continuously	When power is restored to the unit, the Err _ display code clears. If the condition causing the error has not been resolved the Err _ code reappears in the four digit display. Do not attempt to troubleshoot this problem any further.
[Err 2]	<p>There have been more than 99 days since the last Regeneration. If the Day of the Week mode of regeneration is selected and days since last regeneration exceeds 7 days.</p> <p>[7 - - 5]: There have been more than 7 days since the last regeneration. All individual settings (d1, d2, d3, d4, d5, d6, d7) are set to 0.</p>	<p>Regeneration must occur for the unit to recover, the display to clear and the valve to function normally.</p> <p>[7 - - 5]: To recover from [Err2], the user must initiate a regeneration or set at least one individual day to 1.</p>

Resetting The Program To The Default Settings

To reset the controller to the default settings press and hold the Set Up and Set Down buttons for 25 seconds or until the Time of Day display resets to 12:00 P.M. This resets all program step settings to the default values. The program steps must then be reset using the Master Programming procedure in these instructions.

Note: A Master Reset causes the valve to auto-home.

Notes:
